

Code	Description	kvar	Stock	Suplement 1	Suplement 2	Suplement 3
R3Q641EN00000	OPTIM 1-5-440;	5 kvar		2 Standard	Standard	Standard
R3J0050000K00	OPTIM 3-5-230;	5 kvar		1 Standard	Standard	Automatic switch 63 A + Earth leakage
R3Q651EN00000	OPTIM 1-6,25-440;	6,25 kvar		6 Standard	Standard	Standard
R3J105.	OPTIM 3-7,5-440;	7,5 kvar		1 Standard	Standard	Standard
R3Q761EN00000	OPTIM 2-7,5-440;	7,5 kvar		1 Standard	Standard	Standard
R3Q671EN00000	OPTIM 1-10-440;	10 kvar		4 Standard	Standard	Standard
R3Q771EN00000	OPTIM 2-10,5-440;	10,5 kvar		1 Standard	Standard	Standard
R3L110.	OPTIM 3 P&P-12,5-440;	12,5 kvar		9 Standard	Standard	Standard
R3L1A20000K00	OPTIM 3 P&P-12,5-230;	12,5 kvar		5 Standard	Standard	Automatic switch 63 A + Earth leakage
R3L1100000K00	OPTIM 3 P&P-12,5-440;	12,5 kvar		3 Standard	Standard	Automatic switch 63 A + Earth leakage
R3L1A2.	OPTIM 3 P&P-12,5-230;	12,5 kvar		2 Standard	Standard	Standard
R3Q681EN00000	OPTIM 1-12,5-440;	12,5 kvar		2 Standard	Standard	Standard
R3Q781EN00000	OPTIM 2-12,5-440;	12,5 kvar		2 Standard	Standard	Standard
R3J110EN00K00	OPTIM 3-12,5-440;	12,5 kvar		1 Standard	Standard	Automatic switch 63 A + Earth leakage
R3L110000SK00	OPTIM 3 P&P-12,5-440;	12,5 kvar		1 Standard	computer SMART III 6	Automatic switch 63 A + Earth leakage
R3L1100010K00	OPTIM 3 P&P-12,5-440;	12,5 kvar		1 Autotransf. maniobra	Standard	Automatic switch 63 A + Earth leakage
R3Q691EN00000	OPTIM 1-15-440;	15 kvar		2 Standard	Standard	Standard
R3L120.	OPTIM 3 P&P-17,5-440;	17,5 kvar		8 Standard	Standard	Standard
R3Q7E1EN00000	OPTIM 2-17,5-440;	17,5 kvar		4 Standard	Standard	Standard
R3L1200000K00	OPTIM 3 P&P-17,5-440;	17,5 kvar		3 Standard	Standard	Automatic switch 63 A + Earth leakage
R3L120000S000	OPTIM 3 P&P-17,5-440;	17,5 kvar		2 Standard	computer SMART III 6	Standard
R3J115.	OPTIM 3-17,5-440;	17,5 kvar		1 Standard	Standard	Standard
R3L1200007K00	OPTIM 3 P&P-17,5-440;	17,5 kvar		1 Standard	computer Plus comunicaciones	Automatic switch 63 A + Earth leakage
R3L120000SK00	OPTIM 3 P&P-17,5-440;	17,5 kvar		1 Standard	computer SMART III 6	Automatic switch 63 A + Earth leakage
R3L1A7.	OPTIM 3 P&P-17,5-230;	17,5 kvar		1 Standard	Standard	Standard
R3Q7F1EN00000	OPTIM 2-20-440;	20 kvar		3 Standard	Standard	Standard
R3L1A8000KOPR	OPTIM 3 P&P-20-230;	20 kvar		1 Standard		Standard
R3Q7G1EN00000	OPTIM 2-22,5-440;	22,5 kvar		2 Standard	Standard	Standard
R3L130.	OPTIM 3 P&P-25-440;	25 kvar		16 Standard	Standard	Standard
R3Q6F1EN00000	OPTIM 1A-25-440;	25 kvar		6 Standard	Standard	Standard
R5R455.	Optim FRS-25-440;	25 kvar		2 Standard	Standard	Standard
R3Q7H1EN00000	OPTIM 2-25-440;	25 kvar		2 Standard	Standard	Standard
R5Y350.	OPTIM FRM-25-440;	25 kvar		1 Standard	Standard	Standard
R3L1300007K00	OPTIM 3 P&P-25-440;	25 kvar		1 Standard	computer Plus comunicaciones	Automatic switch 63 A + Earth leakage
R3L130000SK00	OPTIM 3 P&P-25-440;	25 kvar		1 Standard	computer SMART III 6	Automatic switch 63 A + Earth leakage
R3L1A50000X61	OPTIM 3 P&P-25-230;	25 kvar		1 Standard	Standard	Automatic switch 80 A + Earth leakage
R3L132ZG00000	OPTIM 3 P&P-26,25-440;	26,25 kvar		2 Standard	Standard	Standard

Code	Description	kvar	Stock	Suplement 1	Suplement 2	Suplement 3
R3Q6D1EN00000	OPTIM 1A-30-440;	30 kvar	3	Standard	Standard	Standard
R3Q7J1EN00000	OPTIM 2-30-440;	30 kvar	2	Standard	Standard	Standard
R3L140.	OPTIM 3 P&P-31,25-440;	31,25 kvar	9	Standard	Standard	Standard
R3L1400000K00	OPTIM 3 P&P-31,25-440;	31,25 kvar	3	Standard	Standard	Automatic switch 63 A + Earth leakage
R3L140000S000	OPTIM 3 P&P-31,25-440;	31,25 kvar	2	Standard	computer SMART III 6	Standard
R3L1A90000L00	OPTIM 3 P&P-31,25-230;	31,25 kvar	1	Standard	Standard	Automatic switch 125 A + Earth leakage
R3J130EN00K00	OPTIM 3-31,25-440;	31,25 kvar	1	Standard	Standard	Automatic switch 63 A + Earth leakage
R3L2A6.	OPTIM 5 P&P-35-230;	35 kvar	2	Standard	Standard	Standard
R3L1990000006	OPTIM 5 P&P-35-440;	35 kvar	1	Standard	Standard	Standard
R3L150.	OPTIM 3 P&P-37,5-440;	37,5 kvar	11	Standard	Standard	Standard
R3L1500000K00	OPTIM 3 P&P-37,5-440;	37,5 kvar	4	Standard	Standard	Automatic switch 63 A + Earth leakage
R55370.	FRF-37,5-440;	37,5 kvar	1	Standard	Standard	Standard
R3L1500010000	OPTIM 3 P&P-37,5-440;	37,5 kvar	1	Autotransf. maniobra	Standard	Standard
R3L160.	OPTIM 3 P&P-43,75-440;	43,75 kvar	12	Standard	Standard	Standard
R3L1600000L00	OPTIM 3 P&P-43,75-440;	43,75 kvar	7	Standard	Standard	Automatic switch 125 A + Earth leakage
R3L160001S000	OPTIM 3 P&P-43,75-440;	43,75 kvar	1	Autotransf. maniobra	computer SMART III 6	Standard
R3J8990000300	OPTIM 6-50-230;	50 kvar	1	Standard	Standard	Manual switch 200 A
R3L1650000L00	OPTIM 3 P&P-50-440;	50 kvar	1	Standard	Standard	Automatic switch 125 A + Earth leakage
R3L165000NOCG	OPTIM 3 P&P-50-440;	50 kvar	1	Standard		Standard
R3L170.	OPTIM 3 P&P-52,5-440;	52,5 kvar	16	Standard	Standard	Standard
R3L210.	OPTIM 5 P&P-55-440;	55 kvar	4	Standard	Standard	Standard
R3L2100000L00	OPTIM 5 P&P-55-440;	55 kvar	3	Standard	Standard	Automatic switch 125 A + Earth leakage
R3L2100000300	OPTIM 5 P&P-55-440;	55 kvar	1	Standard	Standard	Manual switch 200 A
R3L180.	OPTIM 3 P&P-62,5-440;	62,5 kvar	5	Standard	Standard	Standard
R3J150.	OPTIM 3A-62,5-440;	62,5 kvar	2	Standard	Standard	Standard
R3L1800000L00	OPTIM 3 P&P-62,5-440;	62,5 kvar	1	Standard	Standard	Automatic switch 125 A + Earth leakage
R3L220.	OPTIM 5 P&P-70-440;	70 kvar	7	Standard	Standard	Standard
R3L2200000300	OPTIM 5 P&P-70-440;	70 kvar	1	Standard	Standard	Manual switch 200 A
R3L2200000C00	OPTIM 5 P&P-70-440;	70 kvar	1	Standard	Standard	Automatic switch 160A
R3L2200000L00	OPTIM 5 P&P-70-440;	70 kvar	1	Standard	Standard	Automatic switch 125 A + Earth leakage
R3J220000T300	OPTIM 4-75-440;	75 kvar	1	Standard	computer SMART III 12	Manual switch 200 A
R3L2230000MKE	OPTIM 5 P&P-75-440;	75 kvar	1	Standard	Standard	Automatic switch 160 A + Earth leakage
R3L230.	OPTIM 5 P&P-90-440;	90 kvar	8	Standard	Standard	Standard
R3L230000K000	OPTIM 5 P&P-90-440;	90 kvar	1	Standard		Standard
R3L230000S0MK	OPTIM 5 P&P-90-440;	90 kvar	1	Standard	computer SMART III 6	Standard
R3L2300000300	OPTIM 5 P&P-90-440;	90 kvar	1	Standard	Standard	Manual switch 200 A
R3L2300000N00	OPTIM 5 P&P-90-440;	90 kvar	1	Standard	Standard	Automatic switch 250 A + Earth leakage

Code	Description	kvar	Stock	Suplement 1	Suplement 2	Suplement 3
R5S420000N00	OPTIM FR4-100-440;	100 kvar	1	Standard		Standard
R6E4200001000	FRE4-100-440;	100 kvar	1	Standard	Computer 8d	Standard
R3L240.	OPTIM 5 P&P-105-440;	105 kvar	7	Standard	Standard	Standard
R3L2400000300	OPTIM 5 P&P-105-440;	105 kvar	2	Standard	Standard	Manual switch 200 A
R3L2400000N00	OPTIM 5 P&P-105-440;	105 kvar	1	Standard	Standard	Automatic switch 250 A + Earth leakage
R3L2400010300	OPTIM 5 P&P-105-440;	105 kvar	1	Autotransf. maniobra	Standard	Manual switch 200 A
R54R95.	OPTIM FRS P&P-120-440;	120 kvar	1	Standard	Standard	Standard
R3L250.	OPTIM 5 P&P-135-440;	135 kvar	3	Standard	Standard	Standard
R3L2500000N00	OPTIM 5 P&P-135-440;	135 kvar	2	Standard	Standard	Automatic switch 250 A + Earth leakage
R3L2500000400	OPTIM 5 P&P-135-440;	135 kvar	1	Standard	Standard	Manual switch 250A
R3L260.	OPTIM 5 P&P-150-440;	150 kvar	3	Standard	Standard	Standard
R3L310.	OPTIM 9 P&P-165-440;	165 kvar	1	Standard	Standard	Standard
R3L320.	OPTIM 9 P&P-195-440;	195 kvar	1	Standard	Standard	Standard
R3L336003TODV	OPTIM 9 P&P-240-440;	240 kvar	3	Polycarbonate	computer SMART III 12	Standard
R54S29000SP00	Optim FR4 P&P-250-440;	250 kvar	1	Standard	computer SMART III 6	Automatic switch 630 A + Earth leakage
R4E108.	OPTIM HYB2-270-440;	270 kvar	1	Standard	Standard	Standard
R3L410.	Optim 8 P&P-300-440;	300 kvar	1	Standard	Standard	Standard
R3L420.	OPTIM 8 P&P-330-440;	330 kvar	1	Standard	Standard	Standard
R3L430.	Optim 8 P&P-390-440;	390 kvar	1	Standard	Standard	Standard
R4A304.	OPTIM EMS-C-31,25-440;	C kvar	1	Standard	Standard	Standard
R54T25.	Optim FR6-P&P-400-440;	P&P kvar	1	Standard	Standard	Standard